


# SCHAP<sup>®</sup>



## H2 MANNIKIN REPAIR

HUMANETICS  
JASTI

REPAIR  
> PELVIS  
> LEGS  
> KNEES  
ILD RATING

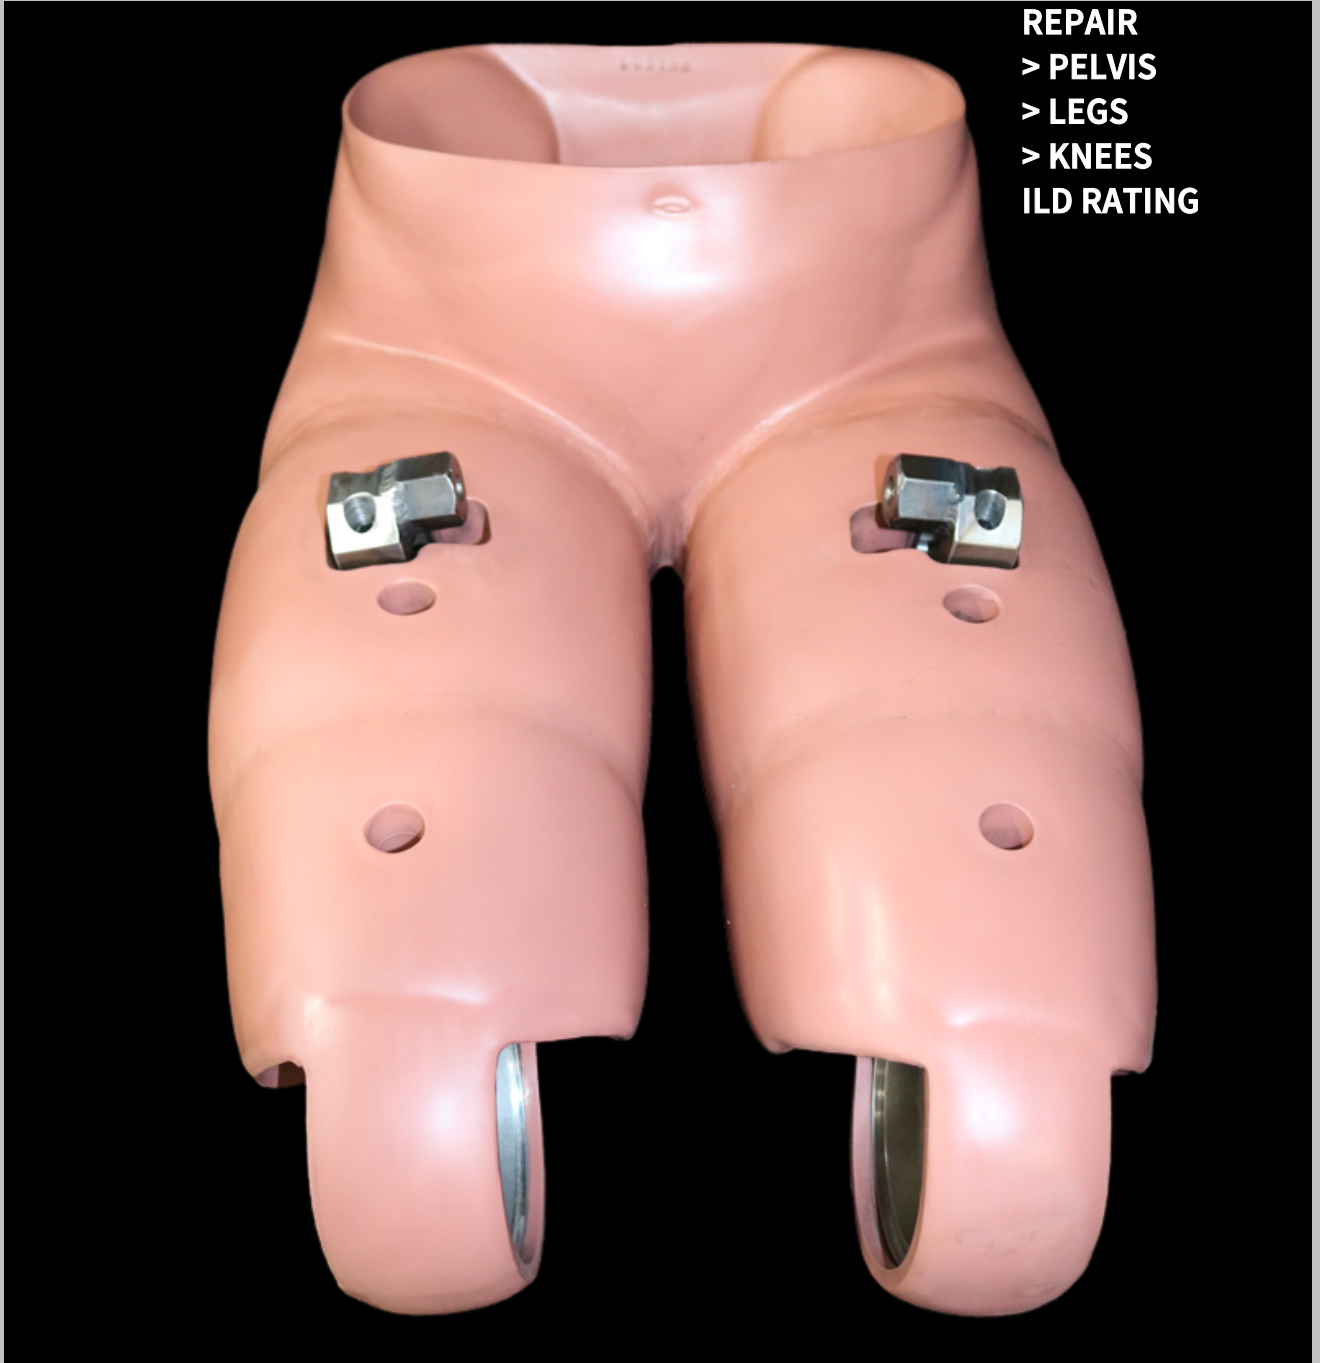

# EXPECT THIS

REPAIR OR REPLACE PELVIS, LEGS, KNEES, HIP JOINTS

REPAIR FLESH THAT HAS TORN, INCLUDING WELDED JOINTS USING 3-LAYER WELDS

ILD TESTING TO MEASURE AND RANK THE QUALITY OF THE FORM

## Purely Cosmetic



### #1

#### The Pelvis

The pelvis takes the most abuse, mainly in the crotch area. Flexing of the legs in opposite directions tends to tear the flesh. Schap repairs those tears, saving you the expense of buying a new pelvis. We inspect the hip joints and check for excessive wear.

### #2

#### The Legs

The legs are typically safe from damage. They tend to tear away from the pelvis at the joints. Schap triple-welds the joints compared to factory flesh. Inserts are available for actuator mounting on top of each of the legs.

### #3

#### The Knees

The knees are not always necessary for testing. But when they are, rest assured Schap will triple-weld them to the legs. To reduce damage to the pelvis crotch area, Schap offers an insert to limit independent movement of the legs.

### #4

#### ILD TESTING

As the form is used, internal foam breaks down and has diminished performance. No one likes decaying variability. Schap inspects the ILD characteristics of the form so you can tell where it is in its life.

### #5

#### NEW, USED, RENTAL

Schap sells Humanetics or Jasti brands. These are available in new or used condition with an ILD rating. Or, you can rent one from Schap, even while yours is being repaired.

### #6

#### FREE ESTIMATES

Send us pictures, or send it in for inspection, we will provide a complete estimate of your repair. Nothing gets done until you say so.



# IT CAN BE BAD

T H E H 2 M A N N I K I N L A S T S M A N Y Y E A R S



## INSPECTION REPORT

- Pelvis - torn from left to right crotch
- Left Leg - hip joint worn to failure, torn joint to pelvis.
- Right Leg - fair condition, torn from pelvis
- Left Knee - good condition
- Right Knee - good condition
- ILD Results - 40% life remaining in pelvis

SCHAP

## WE MAKE IT GOOD

Our experience repairing H2 Mannikins is to your benefit. Extending the life of this important body form drives to the bottom line. Repair costs are a fraction of the cost of a new form. Schap inspects the flesh for tears, internal hip joints for wear, and ILD tests the form for the life of the internal foam. Only Schap fuses the flesh between the pelvis, legs, and knees, to produce a surface without joints. The triple-welding technique is stronger than the surrounding flesh, an effective method of making the forms last longer.

## REASONS TO REPAIR

- Large tears in the flesh
- Loose hip joint
- Open flesh joints on the legs
- Costs a fraction of a new form
- Schap has the experience

**SCHAP**<sup>TM</sup>

17309 Taft Rd. Spring Lake, MI 49456

P : (616)-846-6530 • E : [info@schapmachine.com](mailto:info@schapmachine.com)

• W : [www.schapmachine.com](http://www.schapmachine.com)

© 2019 ALL RIGHTS RESERVED.